


Yellow Comet APC instructions

step 1

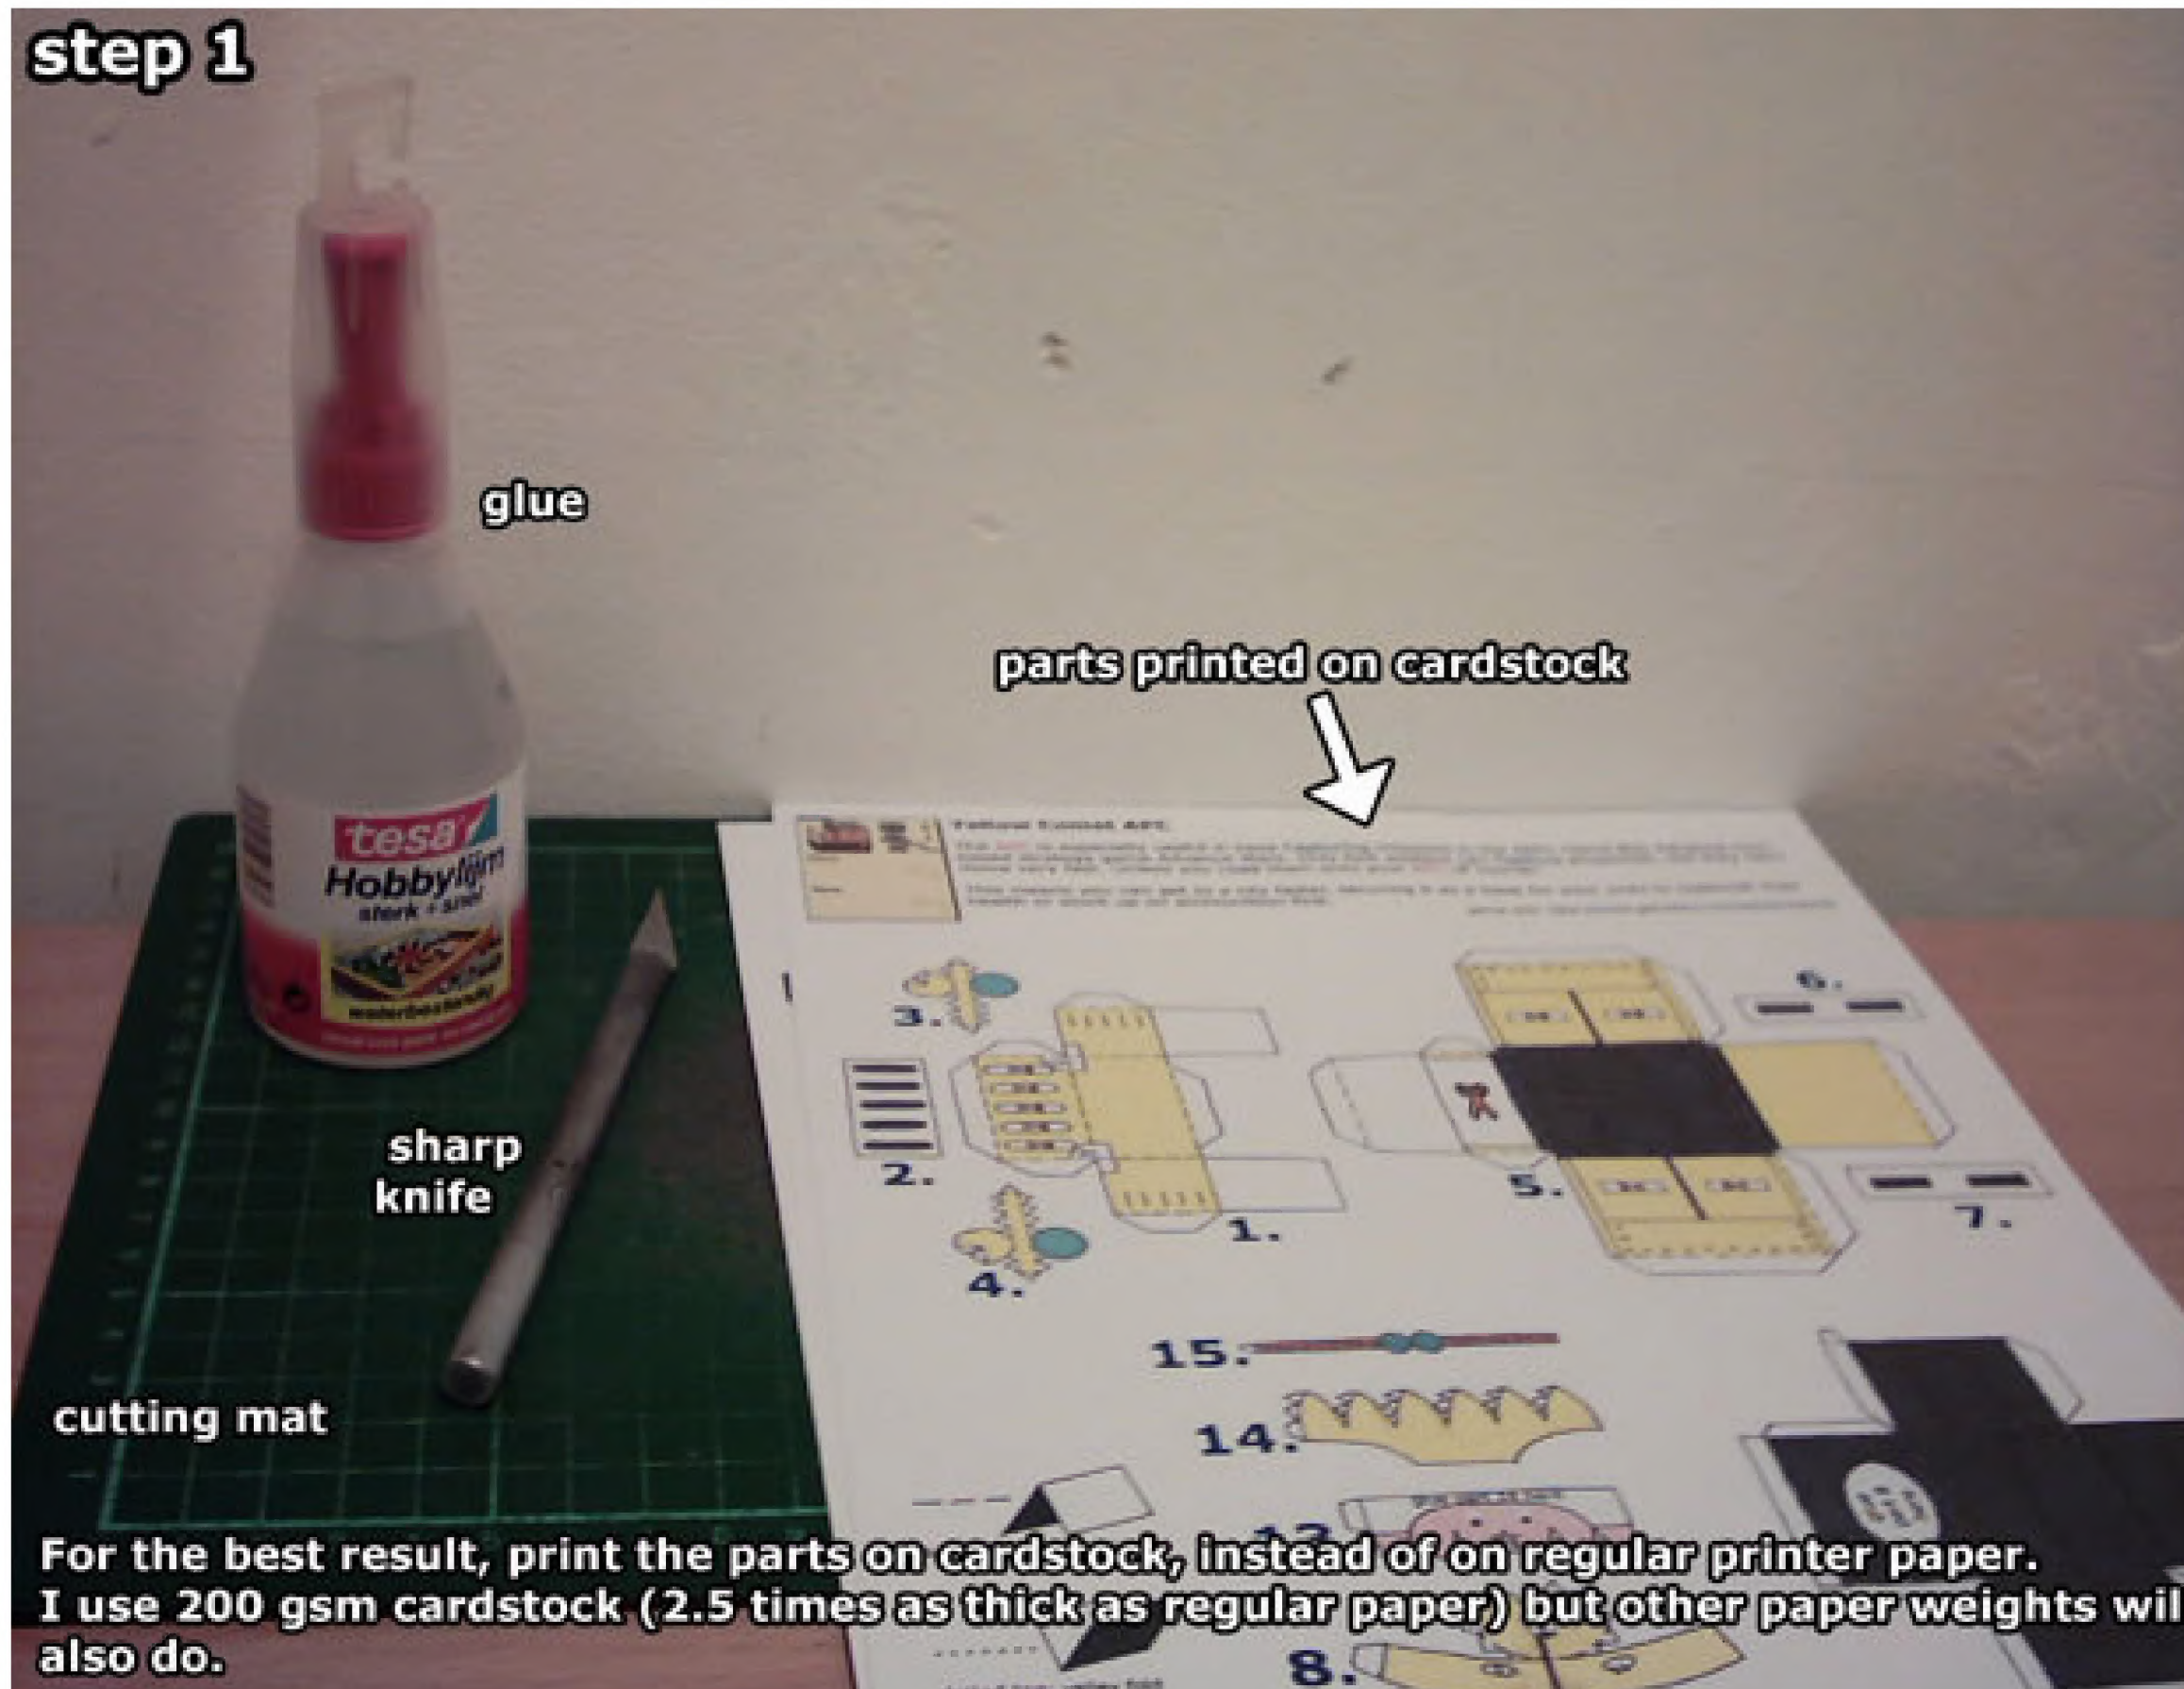


step 2




step 3




step 4

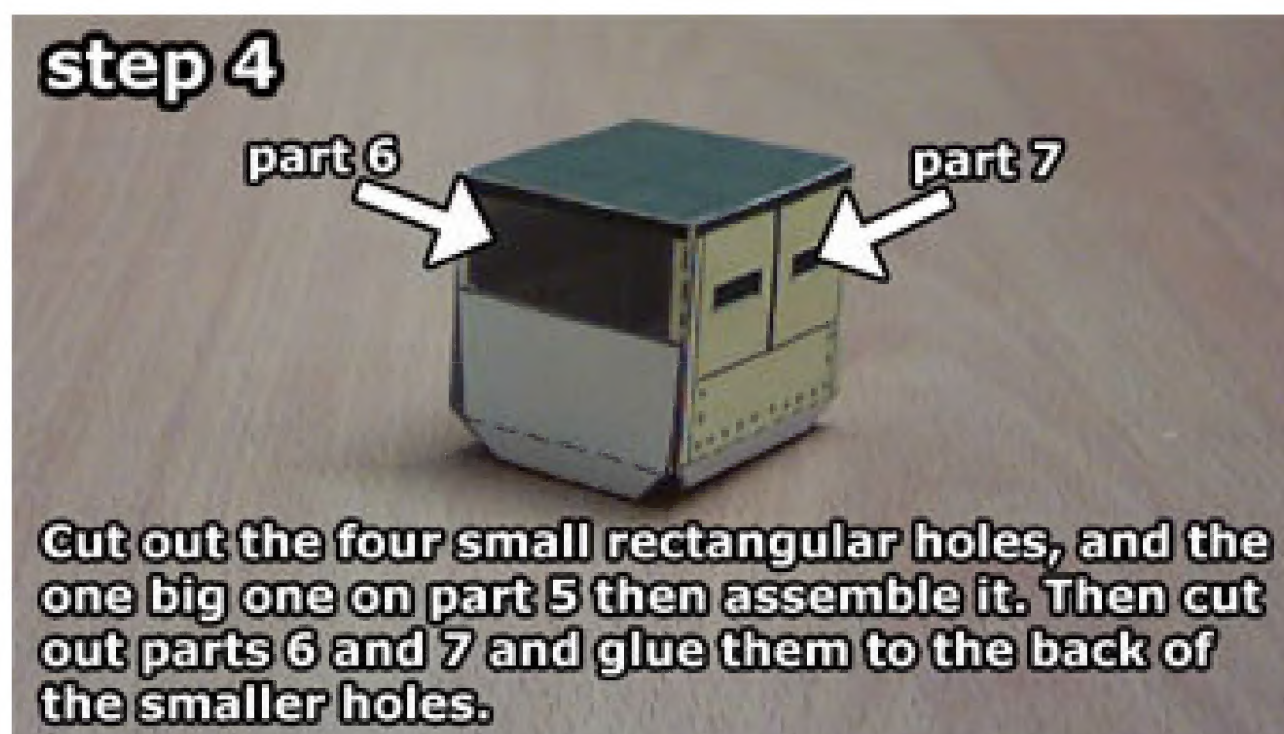


step 5

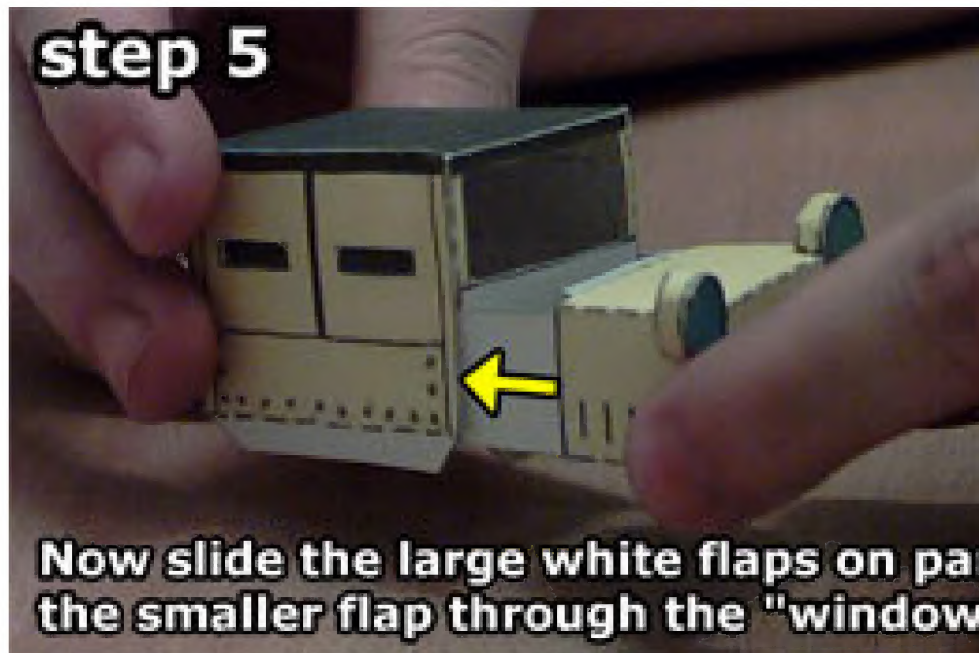

Now slide the large white flaps on part 1 into part 5, and fold back the smaller flap through the "window" to glue them together.

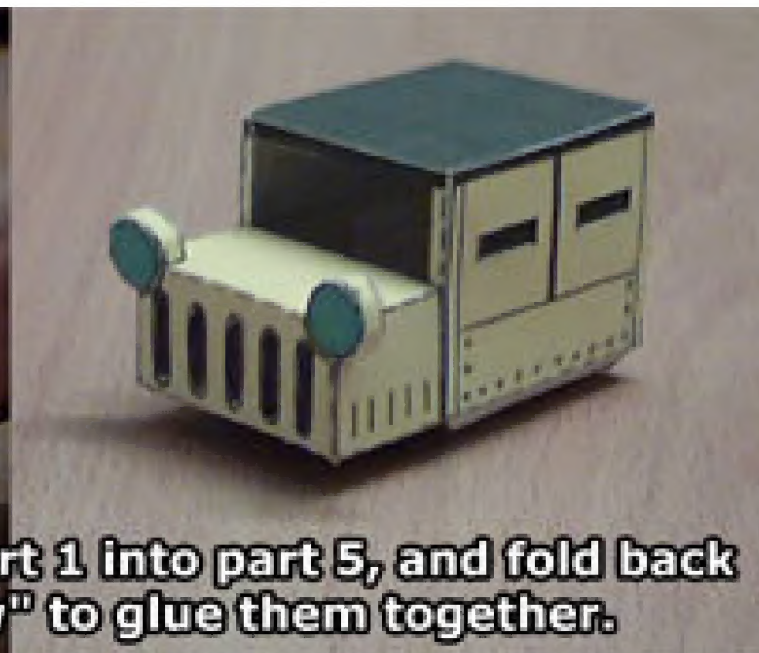

step 6

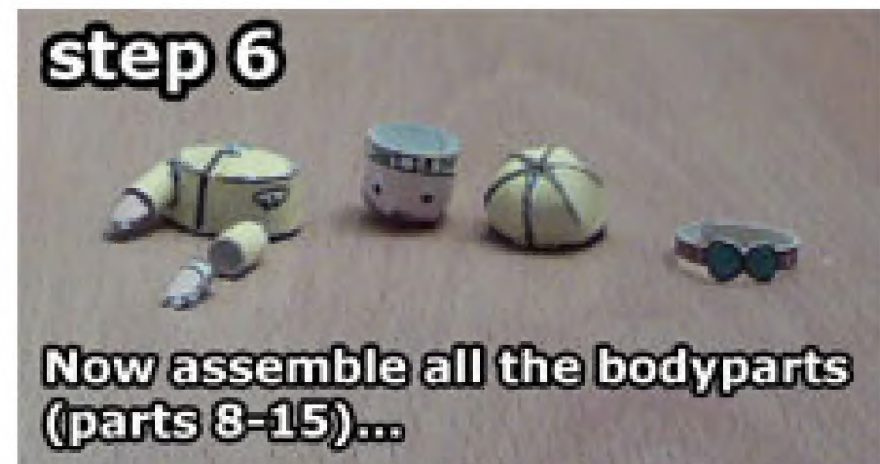

Now assemble all the bodyparts (parts 8-15)...

step 7



...and glue them together.

step 8




Assemble part 16 (colored side in!) glueing the driver onto the big white spot.

step 9




Now glue part 16 inside part 5. Push it all the way up against the roof, and against the big hole at the front.

step 10

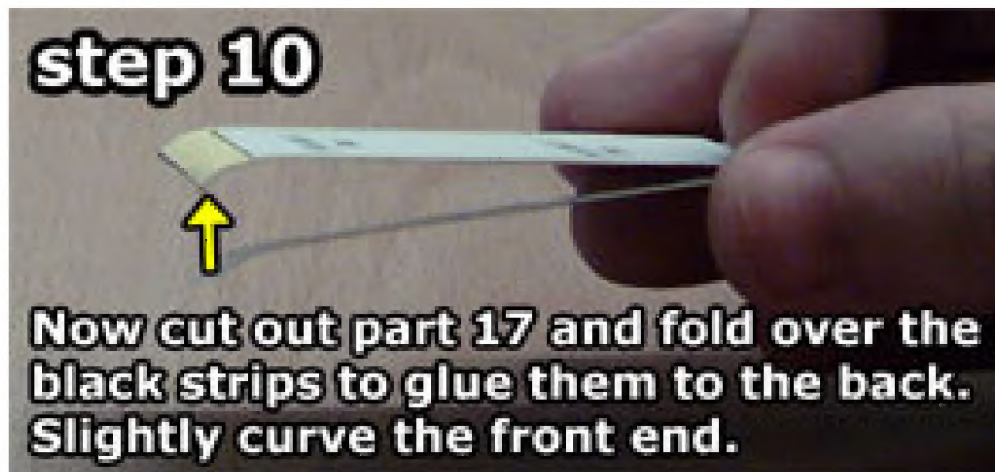

Now cut out part 17 and fold over the black strips to glue them to the back. Slightly curve the front end.

step 11

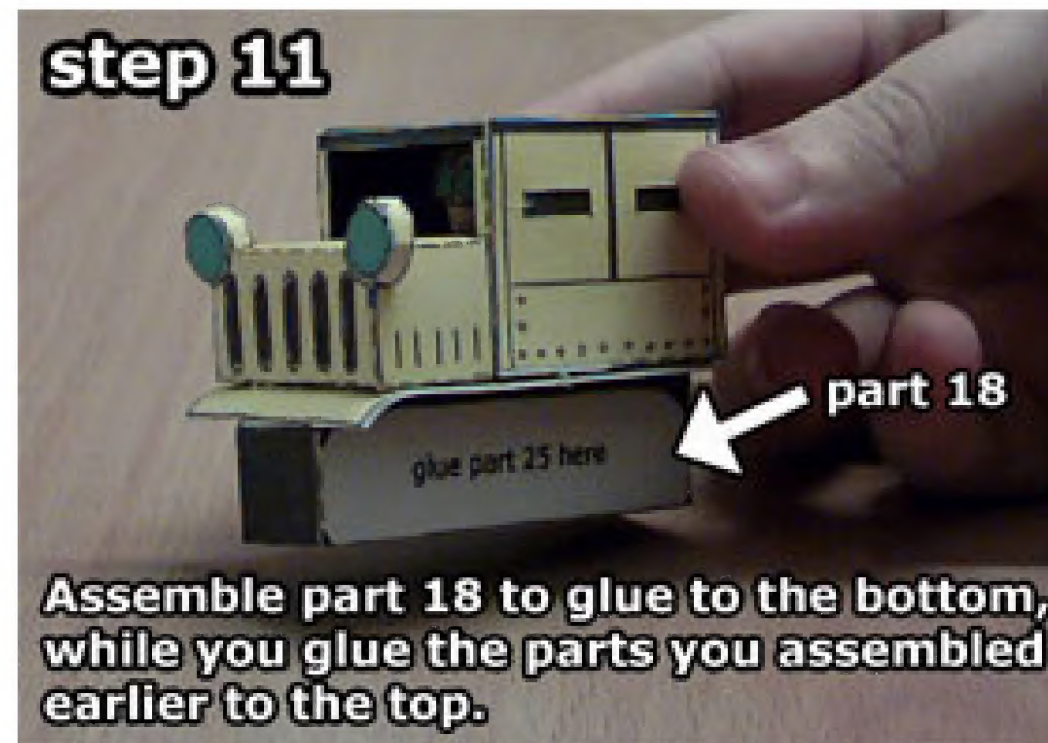

Assemble part 18 to glue to the bottom, while you glue the parts you assembled earlier to the top.


step 12



Assemble both treads (parts 19-24 and 25-30, pretty self explanatory)...

step 13



 **Yellow Comet
APC**

...and then glue them to part 18.
Thank you for downloading and building a Ninjatoes' paper model!!!

<http://members.home.nl/saarloos/>